
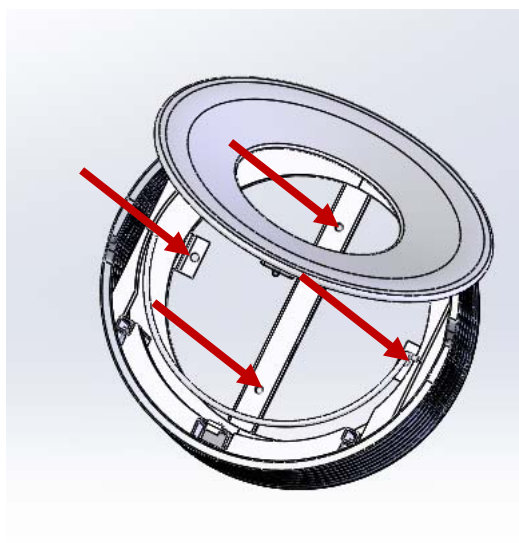


To mount the CESTUM, you'll need the following tools:

1. Rotary hammer with concrete drill diam. 8 mm
2. Iron hammer
3. Hex wrench set
4. Triangular key delivered with the litter bin

And you will use the following screws:

n° 4 bolts M8x92

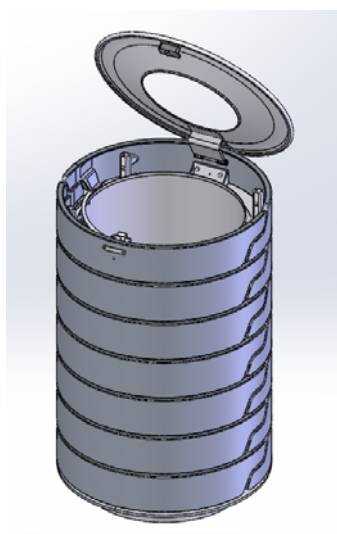

1. Place the litter bin and open the lock with the delivered key. Liften the cover and take out the inner liner.
2. do 4 holes for M8 bolts in correspondence with the holes of the base with the rotary hammer.
3. Insert the M8 bolts into the holes and check the correct tightening.
4. Reinsert the inner liner and close the cover.