



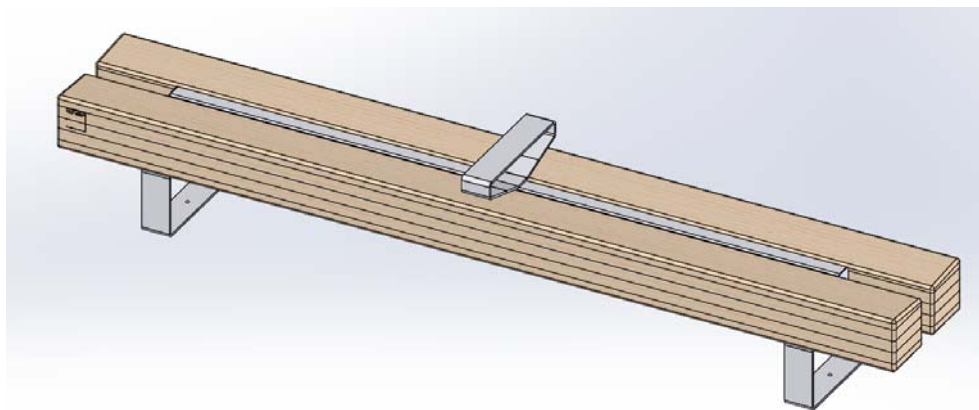

A

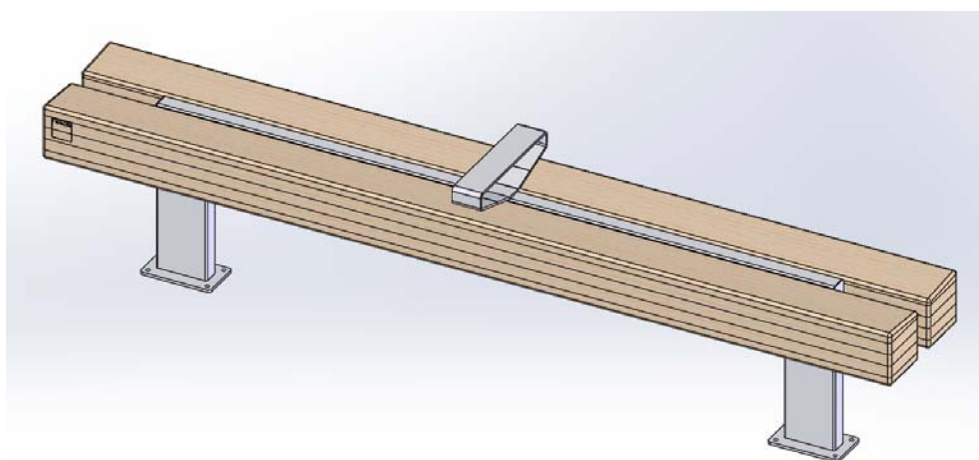


B

FORESTA bench is delivered pre-assembled

If you need to fix it to the ground, the following tools are required:

1. Jackhammer
2. Nr. 2 (A version) or nr. 8 (B version) M10 anchors
3. quick-setting chemical concrete

- 1) Find the installation area. Check that there are no sub-services. Make sure that the ground is level and solid enough (concrete, asphalt, stone or porphyry are all suitable materials).
- 2) Position the bench and drill the floor with diameter 10-15 mm, corresponding to the holes in the baseplates (note that B version must be positioned 200mm under the finished floor).
- 3) Proceed with fixing with mortar / chemical concrete (if needed) using apposite M10 anchors.

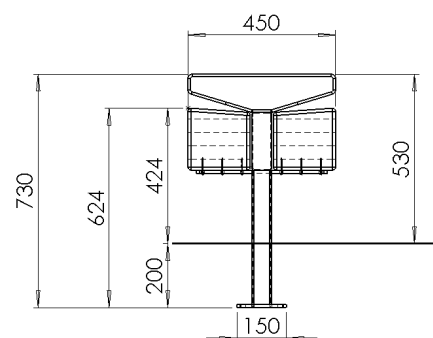

Both aligned and not aligned versions have the same support