



The bench is supplied **completely assembled**, with the exception of the threaded bars for ground fixing.

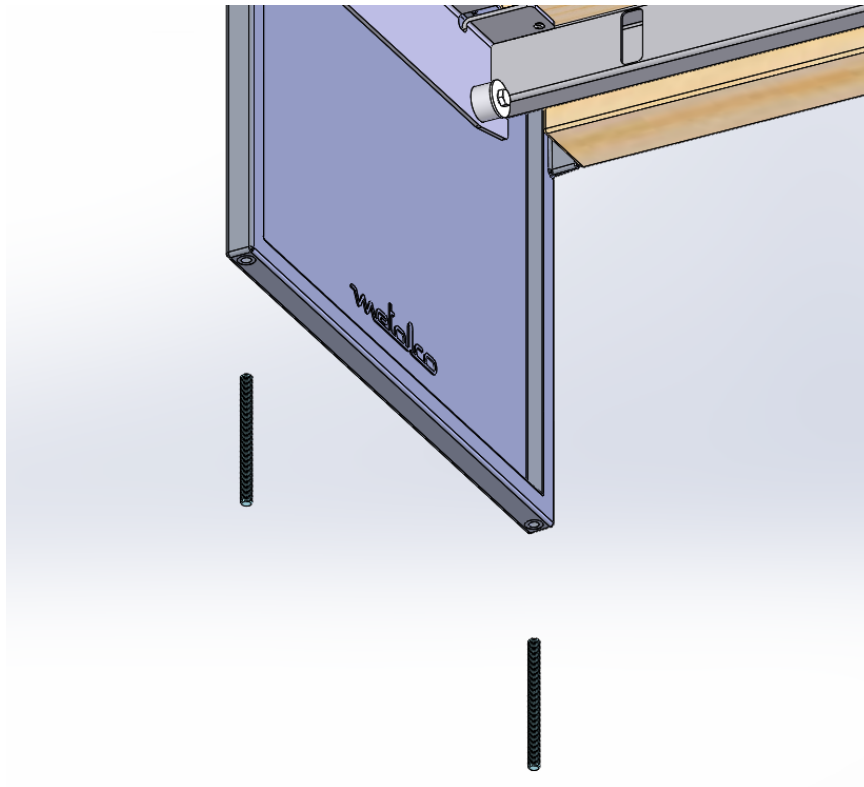

To fix HORN bench the following tools are required:

1. Jackhammer or coredrill with concrete cup
 2. quick-setting chemical concrete
- 1) Find the installation area. Check that there are no sub-services.
 - 2) Fasten the threaded bars M10 to lower support. For a correct installation make sure to rig the bench horizontally (using a bubble).
 - 3) Mark the holes as indicated in the drawing and drill the floor with diameter 20mm.
 - 4) Proceed with fixing with mortar / chemical concrete.

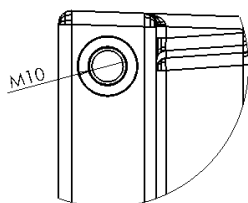

DETTAGLIO A
SCALA 1:1

