
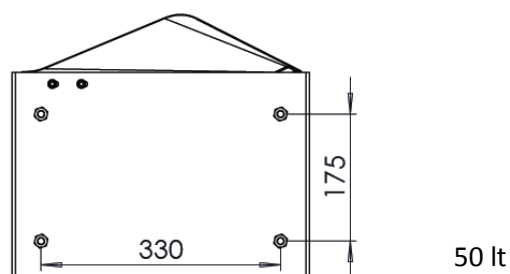
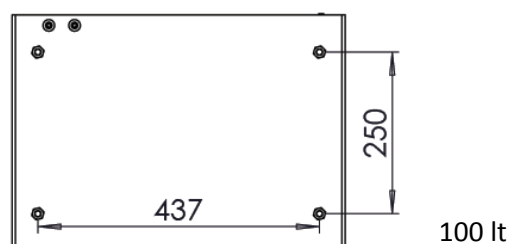


To install the **PACK** litter bin the following tools are needed:

1. Drilling hammer with concrete drill bit with diameter 10 mm
2. Fast-setting chemical anchor

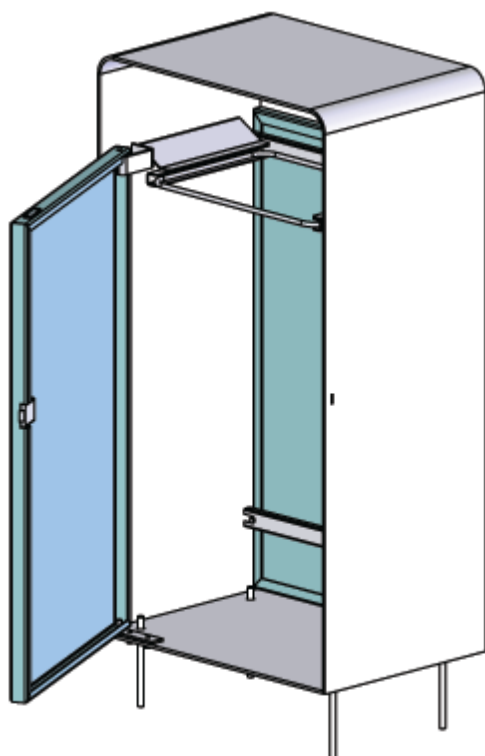

1. Screw the supplied threaded bars on the welded nuts on the bottom of the basket.
2. Make 4 holes for M10 threaded bars with the drilling hammer on the indicated center distances.
3. Insert the M10 threaded bars into the holes and check the correct positioning.
4. Fix with chemical anchoring.