



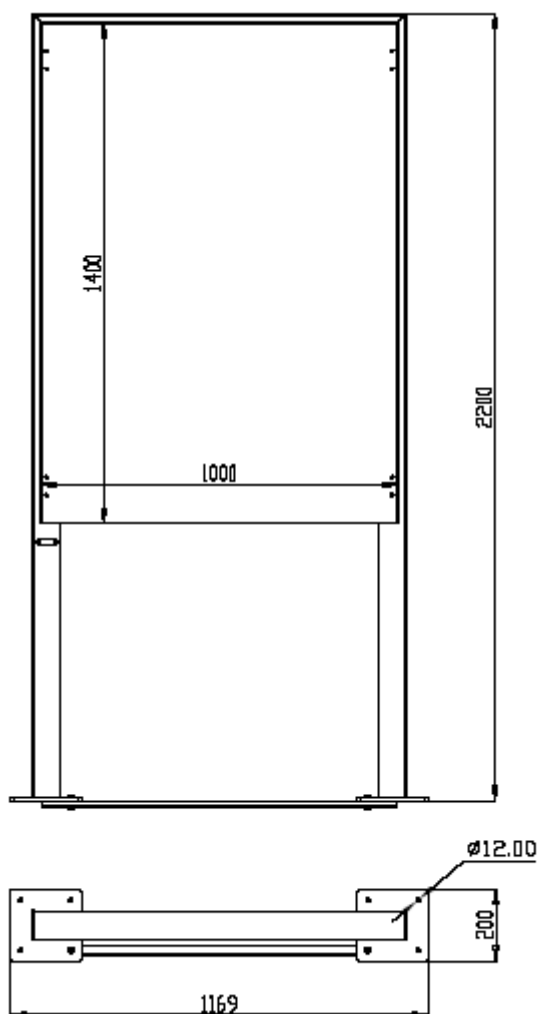

ASSONOMETRIA

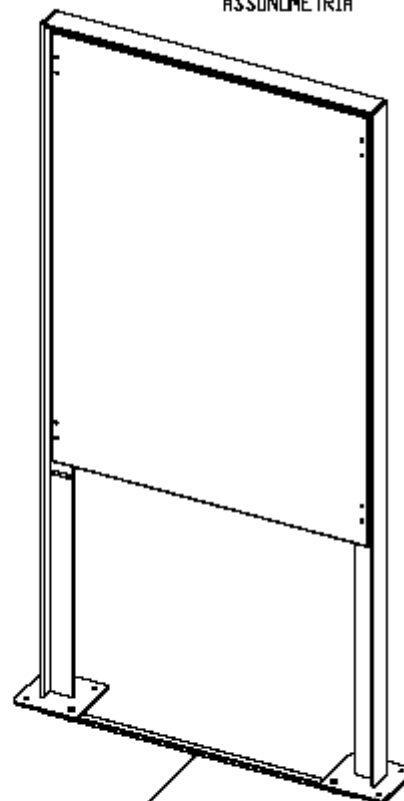

1. Remove the base protection
2. Bolt with proper fixing kits to the ground (holes with a diameter of 12mm) not provided by Metalco

The ground fixing must be made with appropriate dowels depending to the type of the floor.