


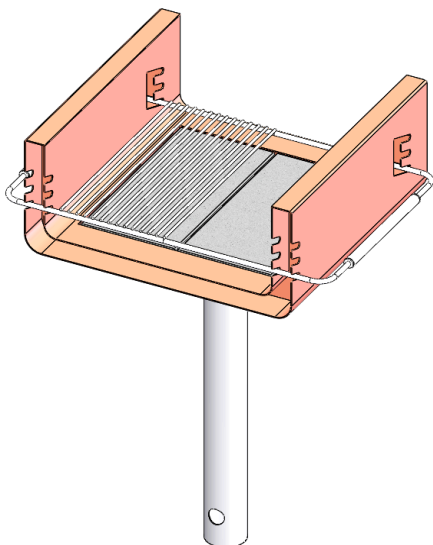

Additional equipment needed:

- pneumatic hammer or core drilling machine
- quick-setting cement

1. Choose the installation area. Verify that there are no sub-services.
2. Make a hole digging an area of 120x120 cm size and 40 cm deep.
3. Position the grill and check the verticality of the bollard, then fix with mortar / chemical concrete
4. To improve the holding of the fixing, insert a rod into the hole at the base
5. Hold the grill in place until the concrete hardens.

