


The bench BULL / PIC BULL can simply be free standing on the stainless steel feet already installed.

If you want to permanently fix the bench, in addition to two plinths (fig. 1) in concrete, you need the following tools:


- Drilling and chiseling hammer with the tip for the concrete diam. 8/10 mm
- Iron Hammer
- hexagonal wrench set

And you will use the following hardware (not included):


- 4 bolts M8 or 10 x 100 / 120mm

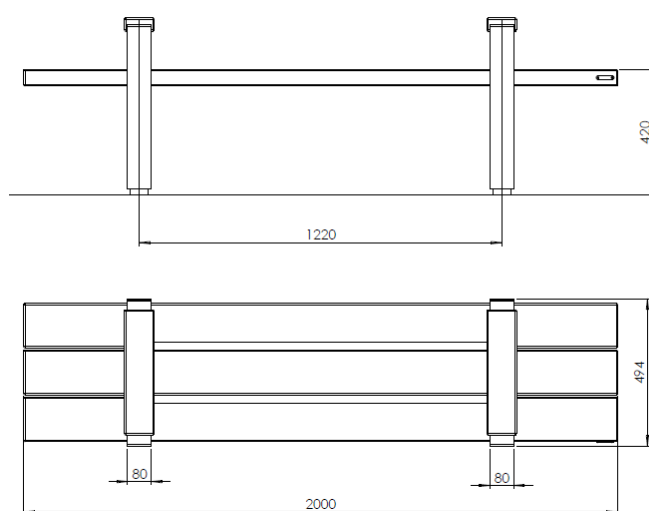

1

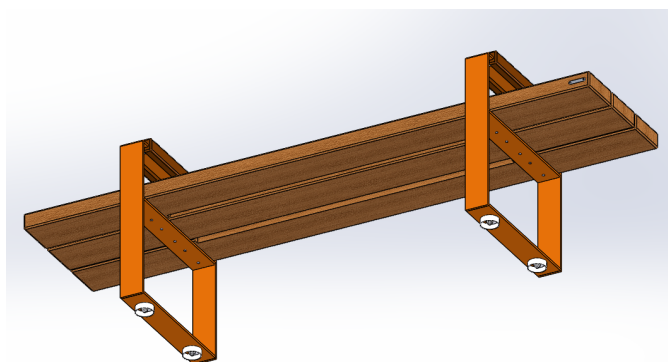

2

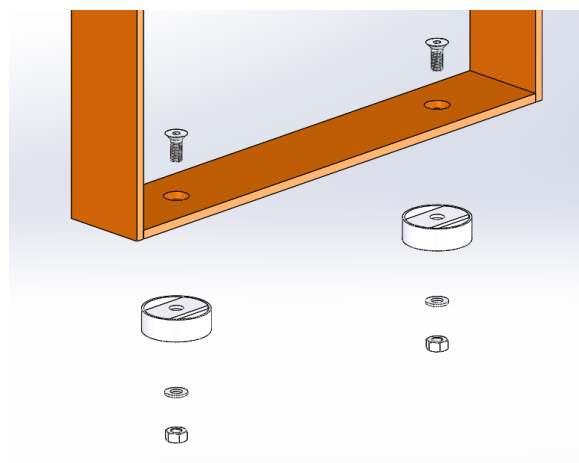

3

1. To fix with the dowels the bench, remove the screws (with nuts and washers) that secure the stainless steel foot.

2. Place the bench and mark on the plinth the position of the supporting holes.

3. Drill holes in the concrete and place the bench, using the foot as a spacer.

4. Fix the bench with the dowels.