

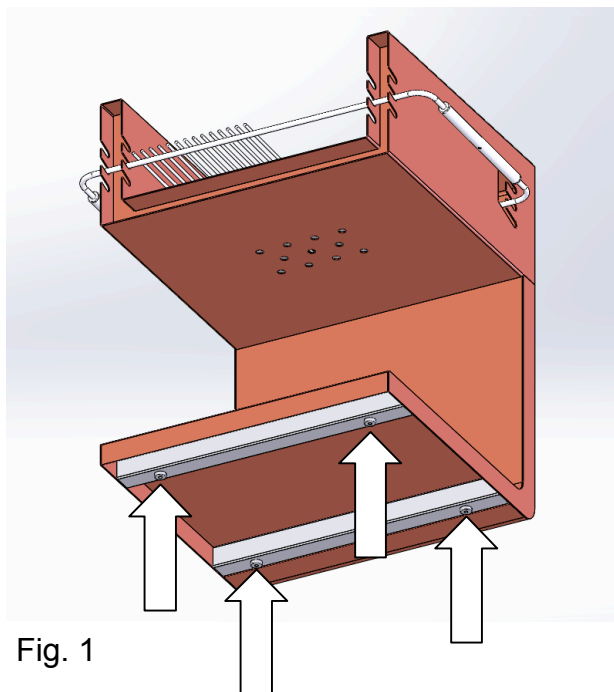


Fig. 1

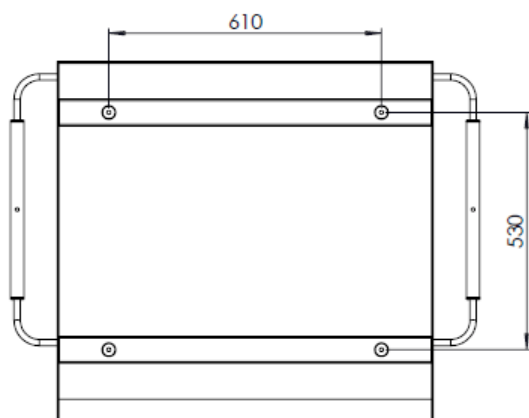


Fig. 2 – seen from below

Additional equipment needed:

- pneumatic hammer or core drilling machine
- quick-setting cement

1. Choose the installation area. Verify that there are no sub-services.
2. Screw the four M10 threaded rods (supplied with the grill if specified when ordering) to the appropriate particular welded to the base of the structure.
3. Make 4 holes 20 cm deep as indicated in Fig. 2, corresponding to the position of the rods.
4. Position the grill and check the verticality of the bollard.
5. Fix with mortar / chemical concrete

If you only need to place the grill on the floor, use the adjustable feet in Fig. 3 (supplied with the grill if specified when ordering) instead of the threaded rods.

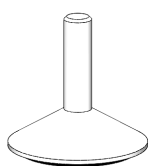


Fig. 3