




To fix CANN bench the following tools are required:

1. Jackhammer or coredrill with concrete cup
 2. quick-setting chemical concrete
-
- 1) Find the installation area. Check that there are no sub-services.
 - 2) Replace the Metalco logo bolt from the top of the bench with the eye-bolt for lifting.
 - 3) Fasten the 4 threaded rods M20 to lower support.
 - 4) Mark the holes as indicated in the drawing and drill the floor with diameter 30-40 mm.
 - 5) Proceed with fixing with mortar / chemical concrete.
 - 6) Replace the eye-bolt with the Metalco logo bolt.

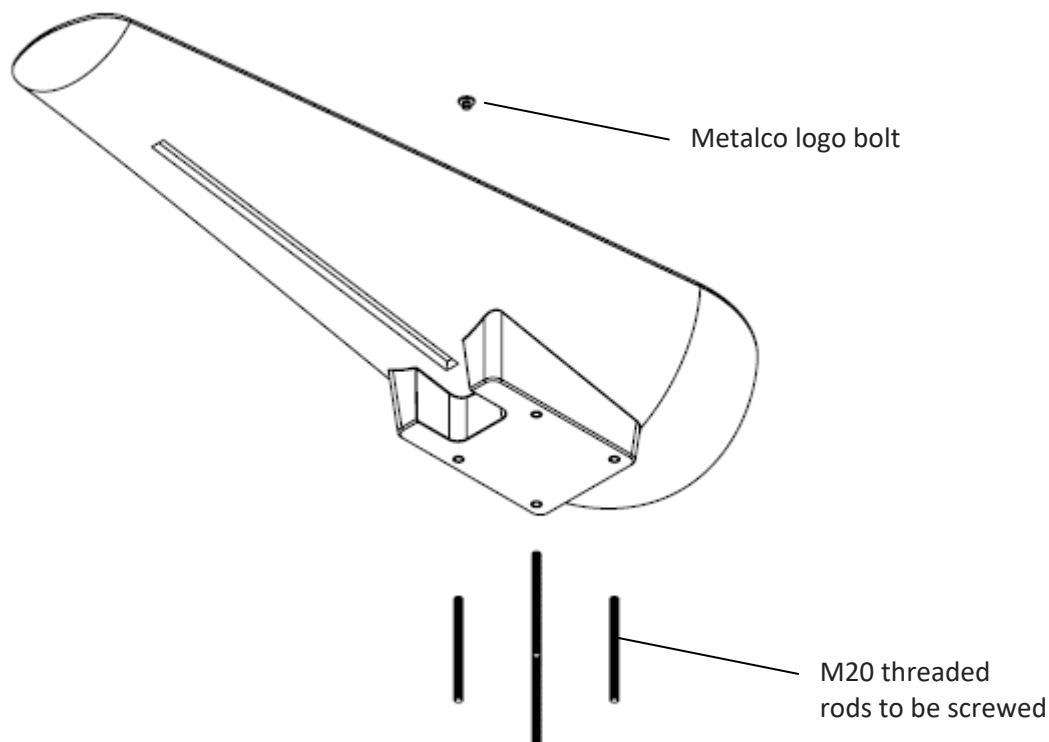