


To mount the CIRCLE Bike Rack / Barrier you will need the following tools:

1. Rotary hammer with concrete drill, diam. 8 mm, or
pneumatic hammer / core drilling machine and quick-setting cement
2. Hex wrench set

You will use the following screws (not included in the delivery if not ordered):

4 bolts M8x92 for concrete (alternatively you can use M8 threaded rods and chemical cement).

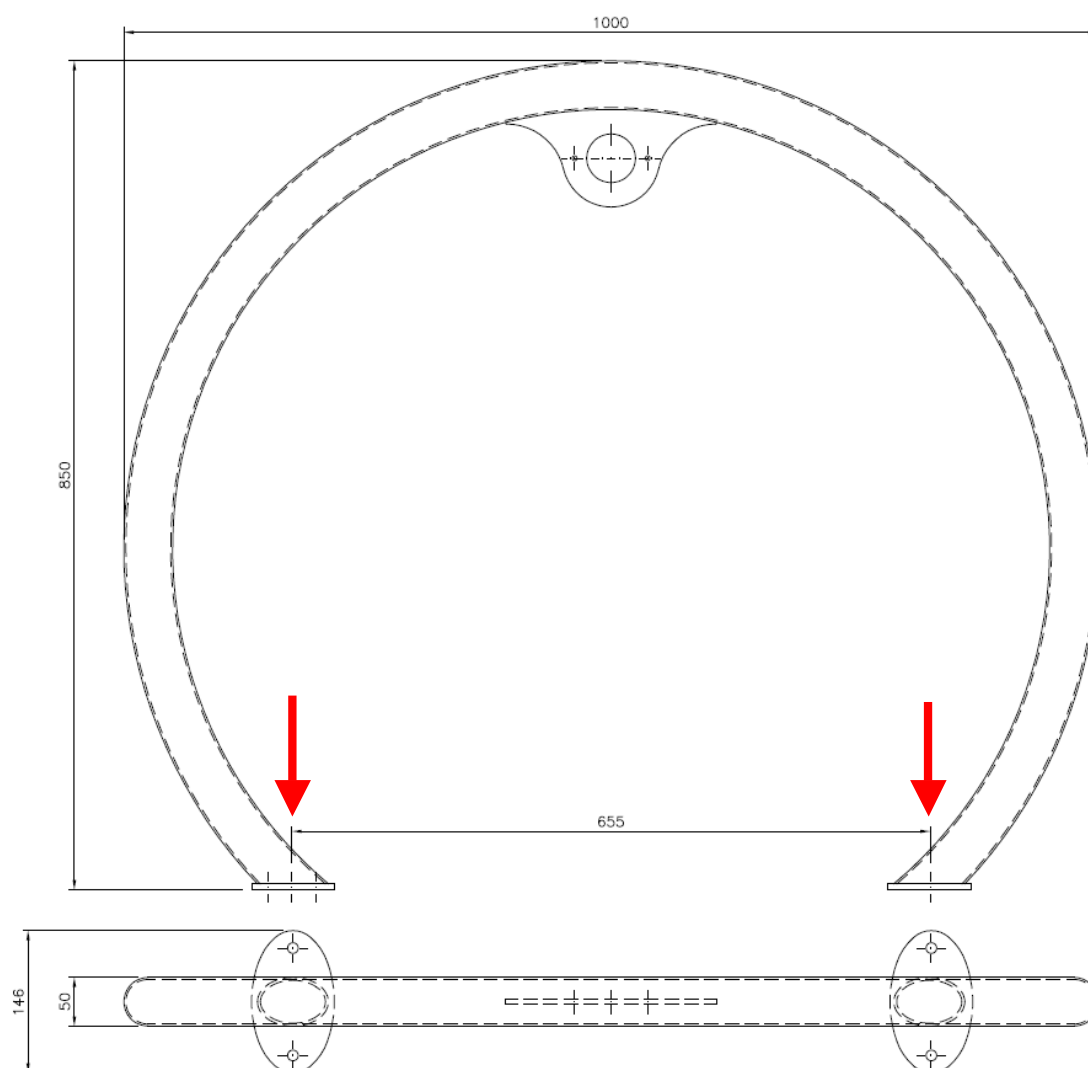

Drill the cement following the interaxis (655mm) of the holes on the base plate and tighten the M8 bolts.