


**To place CORTE litter bin you will need the following tools:**

1. jackhammer or core drilling with cup for concrete
2. chemical concrete quick-setting

or

1. hammer drill with plug drill for concrete diam. 8 / 10 mm
2. iron hammer
3. hex wrenches

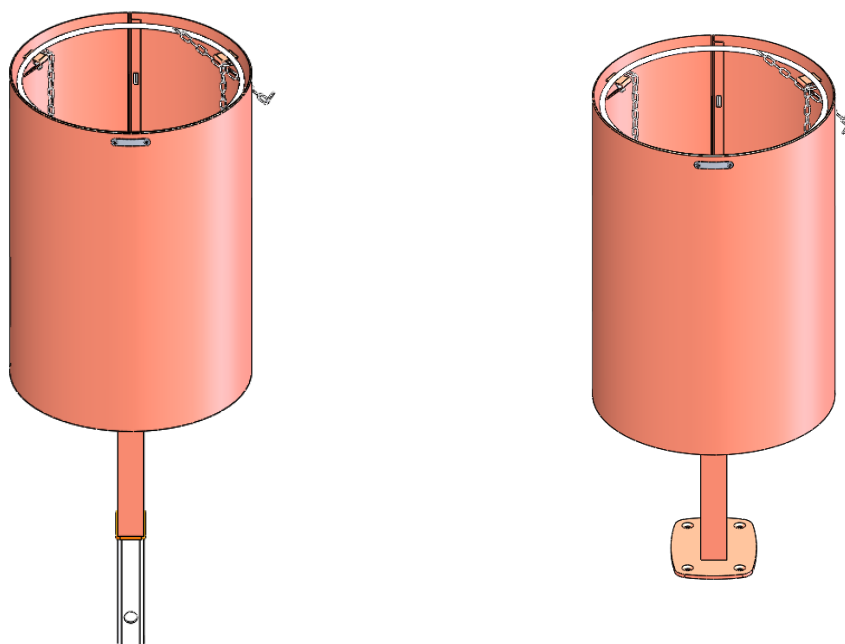

1. If for ingrounding, chose the installation area and verify that there are no sub-services.
2. Make a hole min. D=100mm, depth 300mm, check the verticality of the 40x40mm insert and fix it with mortar / chemical concrete.

*To improve the holding of the fixing, insert a rod into the hole at the base*

1. If with baseplate, make sure that the ground is level and solid enough (concrete, asphalt, stone or porphyry are all suitable materials).
2. Place the litter bin and drill in the ground 4 holes concentric with the pre-drilled holes in the baseplate and fix it with M8 mechanical or chemical anchors and washers, better if countersunk head.
3. Insert M8 anchors in the holes and check the correct fixing.