


Additional equipment needed:

- pneumatic hammer or core drilling machine
- quick-setting cement

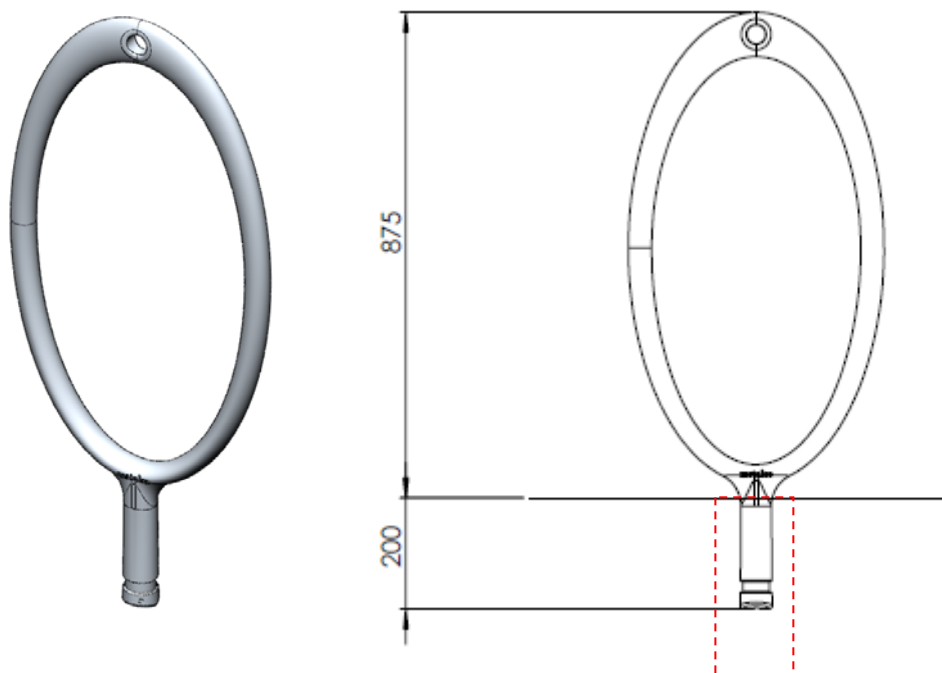

1. Choose the installation area. Verify that there are no sub-services.
2. Make two holes with a diameter of 120 mm min., depth 250 mm min. If you need to make a concrete plinth (in case of non-solid ground), recommended dimensions are 200x200x350 mm.
3. Check the verticality of the bollard and fix with mortar / chemical concrete.