


With Base Plate

Additional equipment needed:

- Power drill with $\varnothing 8$ mm bit
- No. 3 mechanical or chemical anchors M8
- No. 3 washers M8

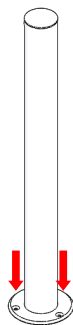

1. Make sure that the ground is level and solid enough (concrete, asphalt, stone or porphyry are all suitable materials).
2. Drill in the ground four holes concentric with the pre-drilled holes in the baseplate.
3. Fix the baseplate with nr. 3 mechanical or chemical anchors and washers.



For Ingrounding

Additional equipment needed:

- Pneumatic hammer or core drilling machine
- Quick-setting cement

1. Choose the installation area. Verify that there are no sub-services.
2. Make a hole with a diameter of 120 mm min., depth 200 mm min.
3. Check the verticality of the bollard and fix with mortar / chemical concrete