

To place ECOSIDE litter bin you will need the following tools:


1. Hammer drill with plug drill for concrete diam. 8/10 mm
2. Iron hammer
3. Hex wrenches
4. Triangular key supplied

You will use the following screws:

n° 4 anchors M8 or 10 x 100/120mm



1. Place the litter bin and open the door with the supplied key.

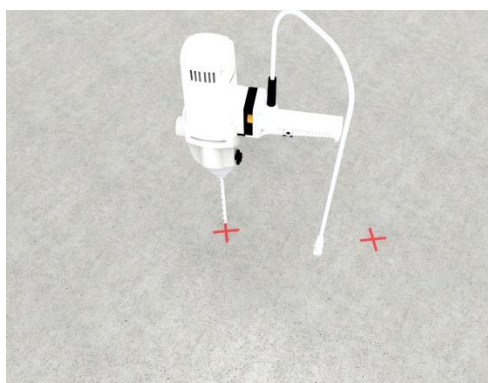

2. Make four holes with the hammer drill in correspondance of base holes for M8 or 10 anchors.



3. Insert M8 anchors in the holes and check the correct fixing.
4. Re-close the door.