


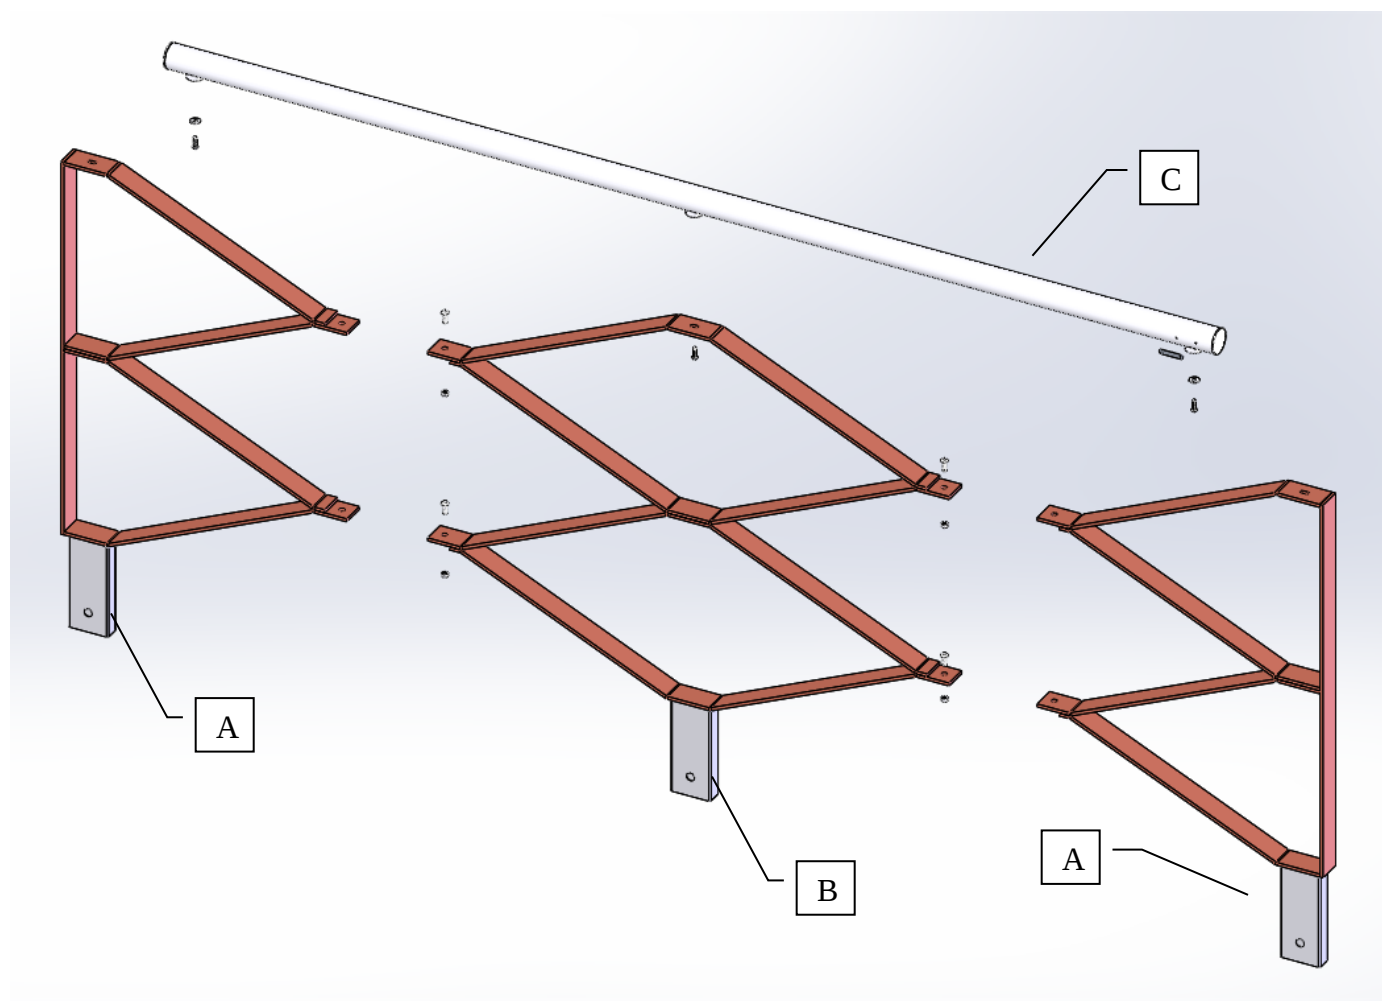

To fix the GITTER barrier the following tools are required:

1. jackhammer
2. quick-setting chemical concrete

- 1) Find the installation area. Check that there are no sub-services.
- 2) drill the holes, size 150x100mm min. and depth 300mm, wheelbase 1250 mm.
- 3) Do a pre-installation of the panels A and B (depending on the length of the composition) using the M10 button head screws supplied with their nuts.
- 4) Place the panels in the holes by controlling the location, which must be flush with the finished floor, and the verticality.
- 5) Proceed with fixing with mortar / chemical concrete.
- 6) Install handrails C with the M8 button head screws supplied and washers in correspondence with the upper slots of the panels.