


To place GUARDIA bike rack WITH BASE PLATE, following tools are required:

1. Expansion or chemicals M8 dowels (supplied only on request) with M8 washers
2. Concrete hammer drill

- 1) Make sure that the subfloor is adequate (concrete, asphalt, stone)
- 2) Drill the ground in correspondence of the holes on the base plate of the bike rack.
- 3) Fix the base plate with the above dowels and their washers.

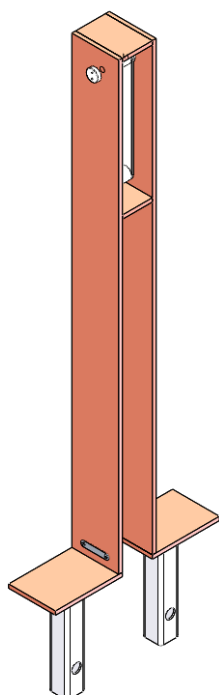

To place GUARDIA bike rack for INGROUNING, following tools are required:

1. Pneumatic hammer or drilling machine with concrete cup
2. Chemical concrete quick setting

- 1) Find the installation area. Check that there are no sub-services.
- 2) Drill two holes of diameter ~ 30 mm, deep 300 mm min.
- 3) Place the bike rack checking that the base is horizontal
- 4) Proceed with fixing with chemical cement.