


To install the MASCHERA panel, the following tools are needed:

1. Rotary hammer drill with drill for concrete diam. 8 mm
2. Hammer
3. A set of hex keys

You will need the following hardware:

1. n. 4 M8*90/100 dowels for each support (not included)
2. n. 3 TCEI M8*25 screws + nut + washer for each support (included)

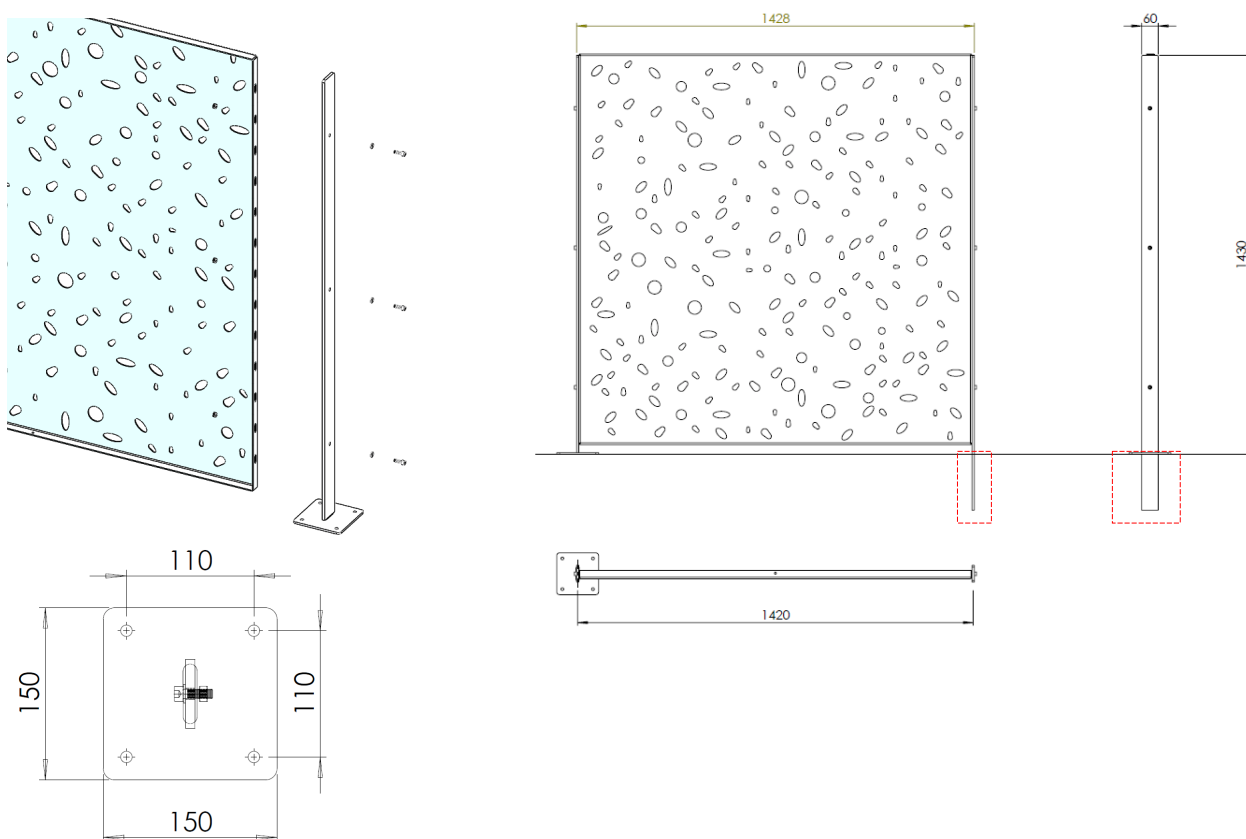

- The supports are mounted with a centre distance of 1420mm, but it's better to mount the panels in sequence to facilitate the installation.
- For supports with base plate: Place the support and make the holes in order to fix it to the ground (where required), then drill the holes and fix the support.
- For in ground supports: fix the support with the chemical cement after making a suitable hole on the existing concrete support or during the casting of the single plinth.
- Fix the panel to the support using the appropriate hardware. The recommended distance from the ground is 3cm.
- For compositions of multiple panels, the screws will fix each support with nr. 2 consecutive
- Check the alignment and verticality of the supports before the final fixing.