


To fix MO ashtray with anchors, the following tools are required:

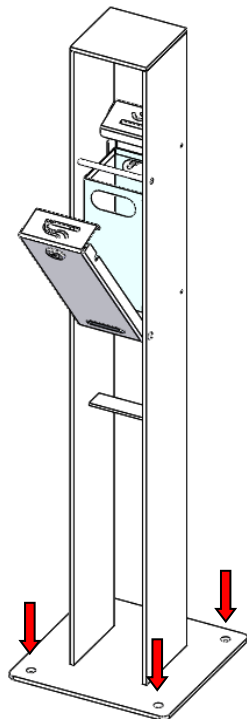

1. Nr.4 expansion anchors or chemical M8 (not supplied) with washers M8
2. drilling machine for cement

- 1) Make sure the subfloor is adequate (concrete, asphalt, stone).
- 2) Drill holes in the ground in correspondence with the holes in the base plate of the bollard.
- 3) Fix the plate with anchors and washers.