


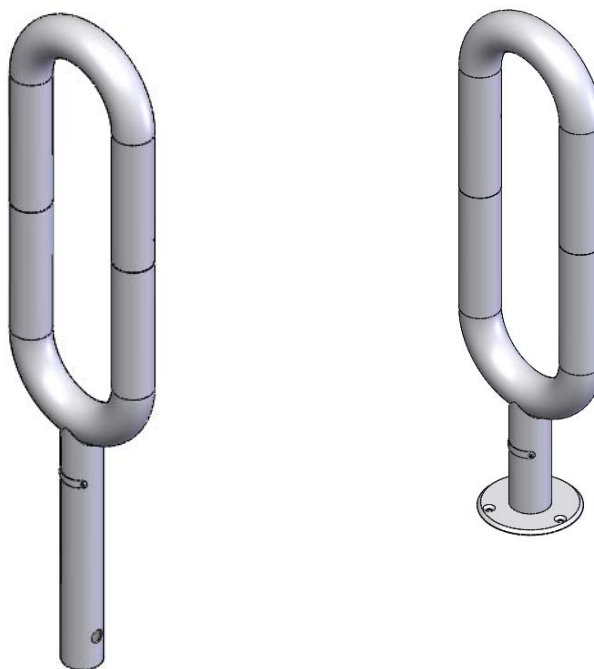

To fix the OVAL bike rack the following tools are required:

1. Jackhammer or core drilling with cup for concrete
2. Chemical concrete quick-setting

or

1. Power drill
2. Mechanical or chemical anchors M8 (not included)

- 1) If for ingrounding, choose the installation area and verify that there are no sub-services.
- 2) Make a hole min. D=100mm, depth 300-350mm, check the verticality of the insert and fix it with mortar / chemical concrete.

To improve the holding of the fixing, insert a rod into the hole at the base

- 3) If with baseplate, make sure that the ground is level and solid enough (concrete, asphalt, stone or porphyry are all suitable materials).
- 4) Drill in the ground 3 holes concentric with the pre-drilled holes in the baseplate and fix it with mechanical or chemical anchors and washers.