


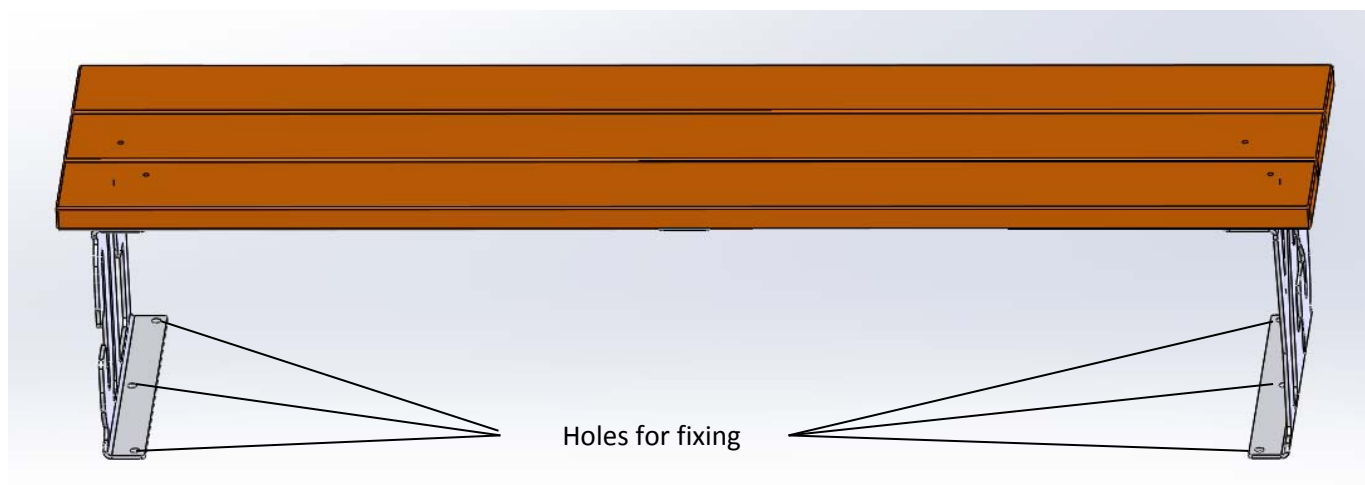

If you need to fix it to the ground, the following tools are required:

1. Jackhammer
2. Nr. 6 M8 anchors
3. quick-setting chemical concrete

- 1) Find the installation area. Check that there are no sub-services. Make sure that the ground is level and solid enough (concrete, asphalt, stone or porphyry are all suitable materials).
- 2) Position the bench / table and drill the floor with diameter 10 mm, corresponding to the holes in the baseplates.
- 3) Proceed with fixing with mortar / chemical concrete (if needed) using apposite M8 anchors.