


To install the RESET bike rack you will need the following tools:

1. Hammer drill with tip for concrete diam. 8mm;
2. Hex wrench set.

You will use the following screws:

6 anchors M8x92 for concrete (not included) (you can also use threaded rods and chemical anchor).

- 1) Position the bike rack and mark the location of the holes in the base plate.

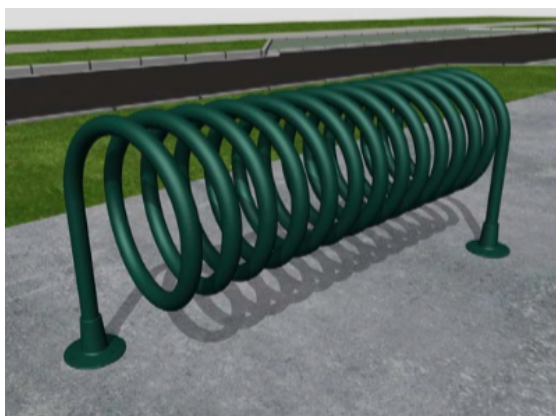

- 2) Move the bike rack before drilling the concrete following the marks made for the hole locations of the base plate.



- 3) Place the bike rack and insert anchors in the holes and lock them.



- 4) Repeat the same operation for the other side of the bike rack.

