

ASSEMBLY AND INSTALLATION INSTRUCTION SHEET RIVA BENCH

MONT

Page 1 of 6

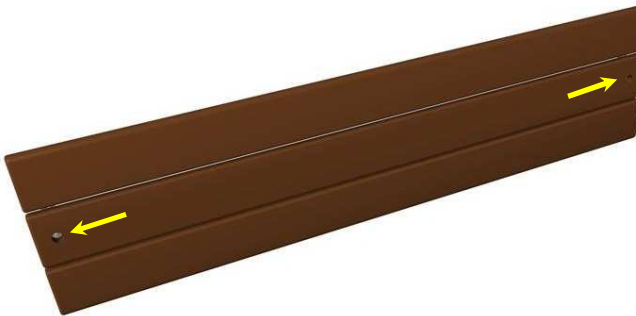
Edition no. 1

Date: 30/04/08

**This instruction sheet provides assembly and installation advice
for the following versions of the RIVA bench:**

- 0013904 RIVA bench with 750-mm long exotic wood slats
- 0013924 RIVA bench with 1750-mm long exotic wood slats
- 0013944 RIVA bench with 3000-mm long exotic wood slats

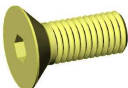
PARTS LIST

Part	Description	No. of pieces
	Pre-assembled backrest	1
	Pre-assembled seat	1

ASSEMBLY AND INSTALLATION

INSTRUCTION SHEET

RIVA BENCH

Part number	Description	No. of pieces
7014504	 Support	2
7014514	 Armrest	2
8406890	 Stainless steel, hexagon socket flat countersunk head screw UNI5933 M10x25	4
8406690	 Stainless steel, hexagon socket flat countersunk head screw UNI5933 M6x16	8
7012592	 Bent threaded rod	4
8409370	 Stainless steel hexagon nut UNI5588 M10	4

ASSEMBLY AND INSTALLATION INSTRUCTION SHEET RIVA BENCH

MONT

Page 3 of 6

Edition no. 1

Date: 30/04/08

ASSEMBLY INSTRUCTIONS



Additional equipment needed:

- hexagon L-wrench

1. Assemble the armrests to the seat and to the backrest with four M10x25 screws (Fig. 1).



Fig. 1

2. Fasten the seat and the backrest to the supports with eight M6x16 screws (Fig. 2).

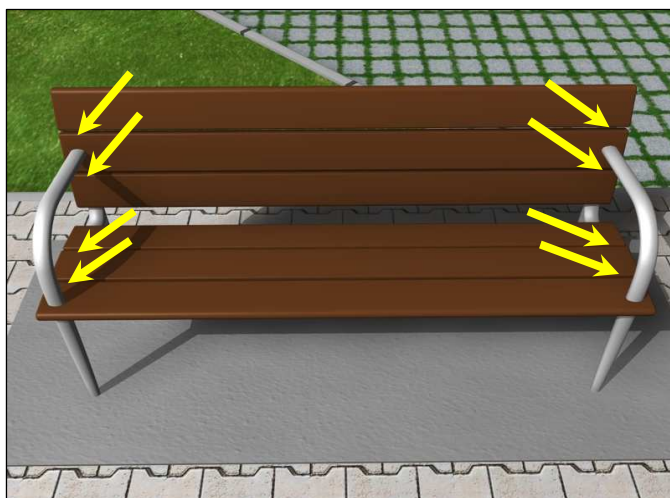


Fig. 2



(detail)

ASSEMBLY AND INSTALLATION INSTRUCTION SHEET RIVA BENCH

MONT

Page 4 of 6

Edition no. 1

Date: 30/04/08

INSTALLATION INSTRUCTIONS

First case: concrete, asphalt, stone or porphyry paving



Additional equipment needed:

- **pneumatic hammer or core drilling machine**
- **quick-setting cement**

1. Screw the bent threaded rods in the lower ends of the supports and screw a nut on the very end of the rods.
2. Drill four $\varnothing 100$ mm holes in the ground. Pour quick-setting cement and insert the threaded rods into the holes (Fig. 3); make sure that the bench is level.



Fig. 3

3. Leave the cement to set and to harden (Fig. 4).



Fig. 4

ASSEMBLY AND INSTALLATION INSTRUCTION SHEET RIVA BENCH

MONT

Page 5 of 6

Edition no. 1

Date: 30/04/08

Second case: loose ground (grassland, sandy soil et cetera)



Additional equipment needed:

- shovel
- quick-setting cement

1. Screw the bent threaded rods in the lower ends of the supports and screw a nut on the very end of the rods.
2. Dig four ø300 mm, 300 mm deep holes (Fig. 5).



Fig. 5

3. Pour quick-setting cement and insert the threaded rods into the holes (Fig. 6).



Fig. 6

ASSEMBLY AND INSTALLATION INSTRUCTION SHEET RIVA BENCH

MONT

Page 6 of 6

Edition no. 1

Date: 30/04/08

4. Set the bench in level position, then leave the cement to set and to harden (Fig. 7).



Fig. 7

5. If required, restore the grass cover (Fig. 8).



Fig. 8