


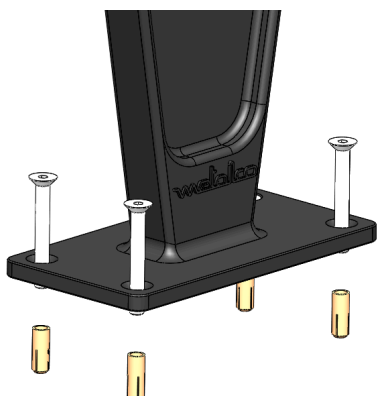


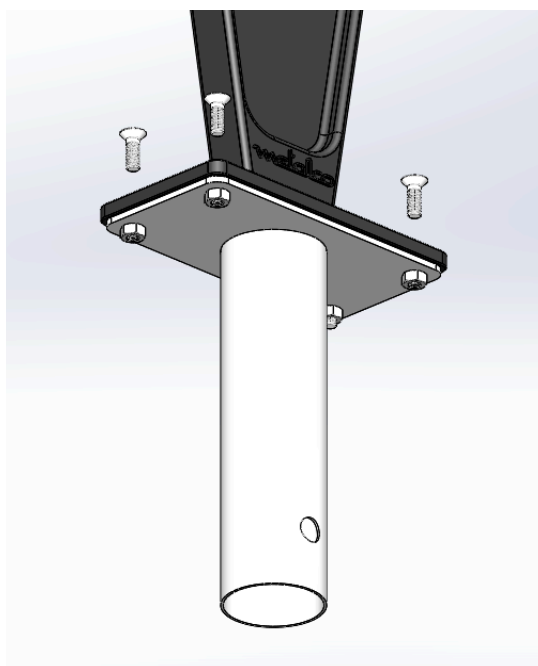

Mark the holes on the base plate and drill the floor. Then insert brass dowels and attach the bench with countersunk flat screws M10

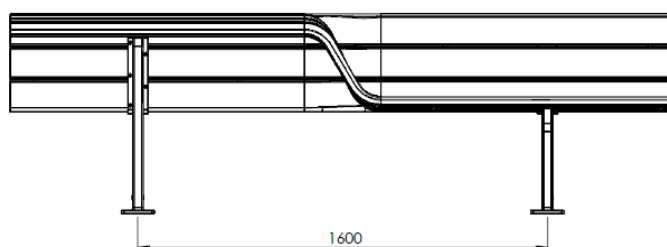

Cement the threaded counter with extension at floor level, respecting the correct distance. Then fix the bench to the backplates with countersunk flat screws M10.

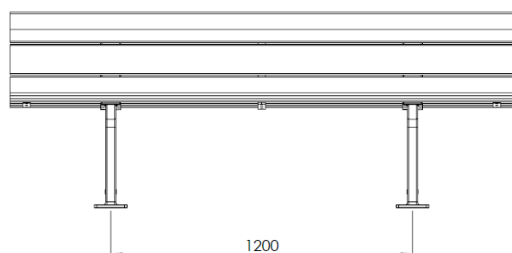

For STRAIGHT version, spacing of the supports is 1200 mm

For TORSION version, spacing of the supports is 1600 mm